UP7THE SELECTION


MANUAL


·사용설명서·



1. Product Components



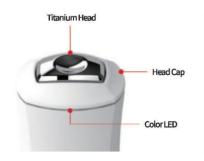

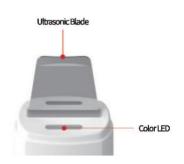

1. Product Components



** Wipe foreign substances off from the charging terminal and then charge the device.

The device may not charge and it may cause malfunction if there are foreign substances on the charging terminal.

2. Product Specification

Device Main Body, Exfoliation Care Head, Line Care Head, Galvanic Care Head, Charge Stand, Adaptor, User Manual

Power	Adaptor :100V~240V(5V500mA)	Model Name	UP7-1000
Battery	Li-Polymer 1400mAh rechargeable	Size	192(W) * 93.86(L) * 194.83(H)
Charging Type	Rechargeable	Weight	601g

% This product is a skincare device, not a medical device.
It provides beauty benefits only but doesn't provide any product functions for medical efficacy.

3. Product Description



Exfoliation Care

Scrubber Mode





Ultrasonic

Green I FD

Line Care

V-Line Mode







Galvanic lo

Red LED

3D Vertical Vibration

Décolleté Mode







Galvanic lor

BlueLED

3D Vertical Vibration

3. Product Description

Galvanic Care



Eye-Zone Mode







Galvanic Ion Red LED

3D Vertical Vibration

Moisture Mode







Galvanic Ion Purple LED

3D Vertical Vibration

Lifting Mode







Galvanic Ion Red&Purple LED 3D Vertical Vibrati

Vitamin C Mode







Galvanicion Purple LED

D 3D Vertical Vibration

Mask Mode







Galvanicion

Red LED

3D /ertical Vibration

4. How to Use

UP7 The Selection How to Use - Head and Mode

- *When attaching the device head, please check the connection mark of the body and the head thoroughly and connect them to fit well.
- * If there are foreign substances or dust in the head joint part when replacing the head, it may cause malfunction.

 Wipe the head joint part clean with a cotton swab when connecting the head to the device body.



UP7 The Selection How to Attach & Detach Head


- · When attaching the head, fit the head to the body well and turn it clockwise to attach.
- · When detaching the head, turn the head counterclockwise.
- · After removing the head, select the head type according to your preference.
- \cdot When attaching and detaching the head, be sure to turn off the power. If you replace the head while the power is on, it may cause a malfunction.
- · Use the scrubber mode after connecting the ultrasonic blade (exfoliation care head).
- · Unable to change modes and vibration levels in scrubber mode.
- · Scrubber mode works only when the frequency of the head and the device body are matched. Do not connect the head to another device's body.

4. How to Use

UP7 The Selection How To Use

- · Place the device body on the charge stand and charge it. (Charge the device until the charge display light on the power button changes to green.)
- · After charging, remove the device body from the charge stand.
- · Connect the head (Exfoliation Care/Line Care/Galvanic Care) to the device body.
- When using the exfoliation head, scrubber mode will simultaneously turn on when the power is on. Spread or spray enough warm water on the area you want to use it on and slowly glide the ultrasonic blade across the desired areas.
- · When using the line care head, gently press the power button. And select the mode and the vibration level after the opening sound.
- · Hold the electrode part of the device body in your palm tightly.
- · It automatically operates when the head touches the skin, and when the head is not touching the skin, it stops and switches the standby mode.
- · When the use of each mode is completed, the product switches to standby mode.
- · The device switches off automatically with the beep sound after it has been inactive for 5minutes on the standby mode.
- · Press and hold the power button for more than one second to switch it off.
- Clean make-up residue on the head, blade, and surface of the device with a soft cloth, cotton cosmetic pad or a swab after use.

UP7 The Selection Button & Slide Touch Pad

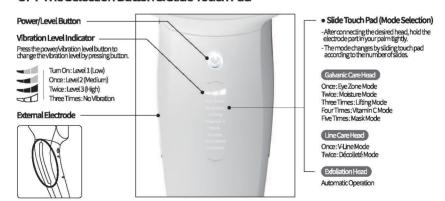

4. How to Use | Exfoliation Care




Scrubber Mode (Recommended to use once or twice a week)


Ultrasonic+Green LED | Operating Time: 3 minutes



 1. Before using the device. wash your face thoroughly.



 2. Connect the exfoliation care head to the main body.



3. Press the power button then the scrubber mode is activated automatically.



4. Spread or spray enough warm water or toner on vourface.



5. Slowly glide the ultrasonic blade in the opposite direction of the skin texture across the area with lots of dead skin cells and sebum. such as the nose, chin, and T-zone.



6. Afteruse, turn off the power and clean the device with a soft cloth or a cotton pad.

1) Apply warm water or toner from time to time to avoid running out of moisture during use.

2) Skin irritation may occur if you use it for one particular area too long. <Pre><Pre>cautions>


3) Adjust the appropriate time and frequency of use depending on your skin condition.

4) Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.



C Eye-Zone Mode


Galvanic+3D Vertical Vibration+Red LED | Operating Time: 2 minutes

 

 Connect the galvanic care head to the main body.



 
2. Apply the eye care skincare product around the eyes.



3. Press the power button and select the eye-zone mode



 4. Gently massage from underneath of eyes to the outer side.



5. Depending on your preference, you can adjust the vibration level.



 After use, turn off the power and clean the device with a soft cloth or a cotton pad.

- 1) Do not put too much pressure on the skin during massage. It may cause skin irritation.
- 2) Adjust the appropriate time and frequency of use depending on your skin condition.
 - 3) Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.



Moisture Mode


Galvanic+3DVerticalVibration+Purple LED | Operating Time:3 minutes 30 seconds



1. Connect the galvanic care head to the main body.



 
2. Apply the moisturizer, nourishing skincare products for your skin type.



3. Press the power button and select the moisture mode



 4. Gently massage your skin ike drawing a circle, along with the skin texture in the order of cheeks, nose, chin, and forehead



5. Depending on your preference, you can adjust the vibration level.




6. After use, turn off the power and clean the device with a soft cloth or a cotton pad.

- 1) Do not put too much pressure on the skin during massage. It may cause skin irritation.
- 2) Adjust the appropriate time and frequency of use depending on your skin condition.
- 3) Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.



C Lifting Mode


Galvanic+3DVerticalVibration+Red&PurpleLED | Operating Time:3 minutes 30 seconds

 

1. Connect the galvanic care head to the main body.



 
2. Apply the lifting cream, anti-aging skincare products for your skin type.



Press the power button and select the lifting mode.



 4. Gently massage your skin in the order of chin, cheeks, and forehead like lifting it from bottom to top.



5. Depending on your preference, you can adjust the vibration level.




 After use, turn off the power and clean the device with a soft cloth or a cotton pad.

- 1) Do not put too much pressure on the skin during massage. It may cause skin irritation.
- 2) Adjust the appropriate time and frequency of use depending on your skin condition.
- 3) Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.




♦ Vitamin C Mode


Galvanic+3DVerticalVibration+PurpleLED | OperatingTime:5 minutes

 

 1. Connect the galvanic care head to the main body.



 
2. Apply the vitamin C skincare products for yourskin type.



3. Press the power button and select the vitamin C mode



 4. Gently massage your skin along with the skin texture in the order of cheeks, nose, chin, and forehead



5. Depending on your preference, you can adjust the vibration level.



 After use, turn off the power and clean the device with a soft cloth or a cotton pad.

1) Apply sunscreen when you go out after using vitamin C mode.

2) Do not put too much pressure on the skin during massage. It may cause skin irritation.


Precautions> 3) Adjust the appropriate time and frequency of use depending on your skin condition.

Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.



Mask Mode

Galvanic+3D Vertical Vibration+Red LED | Operating Time:6 minutes

 

 Connect the galvanic care head to the main body.



 
2. Apply the mask sheet for your skin type.



3. Press the power button and select the mask mode.



4. Gently massage your skin along with the skin texture in the order of cheeks, nose, chin, and forehead



5. Depending on your preference, you can adjust the vibration level.



 After use, turn off the power and clean the device with a soft cloth or a cotton pad.


- 1) Do not put too much pressure on the skin during massage. It may cause skin irritation.
- 2) Adjust the appropriate time and frequency of use depending on your skin condition.
- 3) Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.

4. How to Use | Line Care



O V-Line Mode


Galvanic+3D Vertical Vibration+Red LED | Operating time:5 minutes

 

1. Connect the line care head to the main body.



 
2. Apply the lifting cream, anti-aging skincare products on the jawline.



3. Press the power button and select the V-line mode.



 4. Massage your skin by upward strokes from the bottom of the chin to the bottom of the ears.



5. Depending on your preference, you can adjust the vibration level.



6. After use, turn off the power and clean the device with a soft cloth or a cotton pad.


- 1) Do not put too much pressure on the skin during massage. It may cause skin irritation.
- 2) Adjust the appropriate time and frequency of use depending on your skin condition.
- 3) Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.

4. How to Use | Line Care



Décolleté mode


Galvanic+3D Vertical Vibration+Blue LED | Operating time:5 minutes

 

1. Connect the line care head to the main body.



 2. Apply the dedicated skincare products on the décolleté.



3. Press the power button and select the décolleté mode.



4. Massage décolleté line gently from side to side.



5. Depending on your preference, you can adjust the vibration level.



 After use, turn off the power and clean the device with a soft cloth or a cotton pad.

- 1) Do not put too much pressure on the skin during massage. It may cause skin irritation.
- 2) Adjust the appropriate time and frequency of use depending on your skin condition.
- 3) Close your eyes and use the device so that LED lights don't get directly irradiated to your eyes when massaging around your eyes.

5. How to Charge

How to charge

- · This device is portable after charging.
- · If the LED light does not light up, check for any foreign substances on the connector and wipe the residue off with a soft cloth or a cotton swab.



Connect the adaptor at the back of the charge



Connect the adaptor to an electrical outlet.



Place the device on the charge stand after powering off.



· Charging (Red LED) · Fully charged (Green LED)

The charge display (power button) displays red when charging. It changes to green when fully charged.

<Indicator LED>



Operating White LED





Fully charged Green I FD

- · It displays white when operating,
- · It displays red when charging,
- · It changes green when fully charged.
- · The device switches off automatically with the beep sound when the battery is low.

FAQ

- Q: I have pimples After using the device. What should I do?
- A: UP7The Selection is a device that has functions of the removal of the dead skin and the waste and the penetration enhancement for the active ingredient of skincare products. As a result, skin trouble may be caused because the nutrients of the skincare products can be absorbed deeper than usual. In this case, stop using the device for a week and retry to use it after your skin calms down.
- Q: After the head replacement, the device does not work or there is an error in operation.
- A: The power must be switched off when detaching and attaching the head. Detach the head from the device body and wipe the head joint part clean with a cotton swab. Then, connect the head to the correct position again. Also, check to see if the battery is fully charged.
- Q: The vibration is too strong.
- A: The level of the vibration sets in level 1 (low) when starting operation. You can adjust the vibration level by the power /level button. The sensitivity for vibration can be different depending on your skin condition. If you still feel the vibration is too strong even at the low level, select no vibration.
- Q: It is okay to use each mode longer than the recommended time?
- A: You can adjust the time and the frequency of used epending on your skin type and condition. The using time for the exfoliation care head should not exceed 3 minutes. And it is recommended that the using time for the galvanic care head and line care head does not exceed 20 minutes. Please take proper and steady care according to your skin type.
- Q: The mode does not change smoothly.
- A: For UP7The Selection, you can change the mode by swiping the touch pad from top to bottom or from bottom to top. Quick swipes to change modes can cause a failure in sensor recognition. Swipe slowly in an upward or a downward motion to change mode.
- Q: The device does not work.
- A: The battery may not be fully charged. Check to see if the battery is fully charged.
- Q: The charge light does not light up and won't charge.
- A: Check if the adaptor is connected to the electrical outlet. The device may not charge if there are foreign substances on the adaptor or USB cable. Clean the area with a cotton swab or pad.
- Q: I am unable to change modes or levels while using the exfoliation care head.
- A: When using the exfoliation care head, the mode and the level are fixed and couldn't be changeable.
- O: I am unable to change modes or levels while using the device.
- A: UP7The Selection prevents the mode and the level from changing when the device is being used. Stop using the product to change mode.

FAQ

- Q: The battery life is getting shorter.
- A: The battery is a consumable product, so its life will start to shorten after the first use. Keeping the charged battery in extremely low or high temperatures may affect the battery life as well. Actual battery life may vary according to each mode and vibration strength.
- Q: UP7 The Selection is turned off automatically with a beep sound during operation.
- A: In case the battery is discharged, it sounds beep and turned off automatically. Please charge the battery enough to use.
- Q: How can I clean up the device?
- A: Except for UP7 The Selection's exfoliation head, the other two heads are the type that the head cap opens. After using, open the head cap and remove any residue of the cosmetic products with a soft cloth, cotton pad, or cotton swab.
- O: I feel a sting when massaging on the bare skin.
- A: It may be caused by micro-current flows to the skin directly when using the device on bareskin. Please apply skincare products on the skin and use the device to help to penetrate cosmetics into the skin effectively without skin irritation.

 X For sensitive skin, it is strongly recommended to apply cosmetics enough when using the device.
- Q: Cosmetic products are all absorbed before time is up. It is hard to keep massaging.
- A: Please apply cosmetic products again to keep massaging. In case of using the products which are absorbed quickly such as essence, it is recommended to change to other ways like staying on the skin for 1~2 seconds and moving again.

 X If you feel that the product is fully absorbed into the skin even though the operation time is left, you can stop using it.

< Precaution for After-Sales Service>

Please make sure to include all the 3 heads and main-body when sending products to our customer center.

6. Safety Instruction

Precaution Before Use

- · Children, pregnant women, and those with heart diseases are strongly recommended not to use this device.
- Do not use it on wounded or initated skin.

Safety Caution

- · For safe and correct use of UP7 The Selection, please read this user manual thoroughly before use.
- · Besure to follow the instructions as the cautions indicated here include the important safety information.

Do not use this device for those persons listed below.

- Patients with wearable electrical devices such as a cardiac pacemaker
- Patients with electrical life-support equipment such as a heart-lung machine
- Patients with mounted electrical medical equipment such as electrocardiogram

Precaution for Skin Safety

- For the persons listed below, make sure to consulty our doctor before using the product.
 Persons during skin recovery due to the skin-related treatment or plastic surgery/Patients with cardiovascular disease/Patients with notorine abnormality/Patients with sensory nerves abnormality/Patients with ophthalmologic disease & experience of surgery/Patients with infectious disease/Patients with thyroid disease/Patients with policipsy symptom/Persons taking hormone imbalance drugs/Persons with allergic, acneskin/Wounded skin/Persons with skin disease or skin irritation/Persons with sun allergy
- · It is highly recommended to test the device on your arm with cosmetic products before use.
- When using the device around the neck, avoid the usula area with the thyroid gland.
- Do not put the device directly on your eyes and ears, including your mouth.
- · Do not letyour eyes see the LED lights directly.
- · Remove all the metal jewelry you wear before use and keep the device from touching metals.
- · Do not use the device for one particular area too long and keep moving it according to the guide in this manual.
- · Do not use the device immediately after shaving or waxing.
- Regardless of using the device, there may be temporary changes in skin condition depending on internal /external factors.
- · Usethe device afteryour skin returns to normal or after consulting your doctor.

6. Safety Instruction

- When using the device, there may be various types of skin irritation depending on personal skin conditions. If you
 have skin irritation, reduce the use of the device. If irritated skin persists, stop using the device irrimediately and
 consulty our doctor.
- Women who are pregnant, menstruating, or breastfeeding are strongly recommended not to use the device as hormone balance is unstable and it can temporarily causes kin trouble or worsen.
- · Do not use this device to those persons who cannot clearly express their intention, including infants.

Precaution for Product

- · Do not use for a purpose other than directed as malfunction may occur.
- · Do not take apart or repair arbitrarily.
- Do not pierce the gap in the device with sharp metal objects.
- · Do not dean with flammable substances such as alcohol, benzene, orthinner.
- · Do not keep the device under direct sunlight and keep away from hot water.
- Makesure to connect to a certified power adaptor with a KC certification mark and charge it into the 100-240V plug.
- · Do not use the device while driving or walking.
- Stop using the product if item its smoke or strange odors and turn off the power immediately/when changing, disconnect the adaptor). Contact the customers ervice center.
- Stop using if the device is cracked or damaged. Contact the customer service center.
- · Wrap your fingers around the metal part of the electrode for the electronic current to flow while operating the device.
- Since UP7 The Selection has strong magnetic power, keep it away from any magnetic object such as credit card, TV, monitor, video tape, watch, etc.
- Do not drop the device. Malfunction may occur and additional costs for repair may apply even during the warranty period.
- If there is a problem with charging, wipe the chargestand inside and charging terminal properly. If the charging problem remains unsolved, please contact the customer center or the authorized retailer.
- Do not use the product until its battery is fully discharged. Charge it as often as needed. Frequent full discharges cause the downgrade of product performance.
- If you use the scrubber mode while talking over the phone, the sound may not be accurately transmitted to the
 person at the other end of the line due to the ultrasound of the blade. Please stop using the scrubber mode while
 you are on the phone.
- Scrubber modeworks only when the frequency of the head and the device body are matched. Do not connect the head to another device's body.

6. Safety Instruction

How To Store

- · Afterusing, wipe the heads and main body dean and keep it in a dean environment.
- Do not keep the device in the place under high temperature or exposure to humid, flammable environments, dust, etc. It may cause malfunction.
- · Please turn the device off and charge it on the charge stand when not in use.
- Do not put heavythings, water, and beverages on the device. If the liquid is getting inside of the device, it causes errors.
- · Keep the product out of reach of young children.
- Do not put this device inwater orwash with water. In case the device is dropped in water, immediately all the device to airdry and contact a customer service center.

